

OMNISCAN PRODUCT MANAGEMENT TEAM | MAY 2024

# How to Update MXU Software

---


OmniScan™ X3 Series

# Agenda

---

**01** Updating MXU via the Cloud and a Wireless Connection

**02** Updating MXU via the Evident Website and a Flash Drive or SD Card

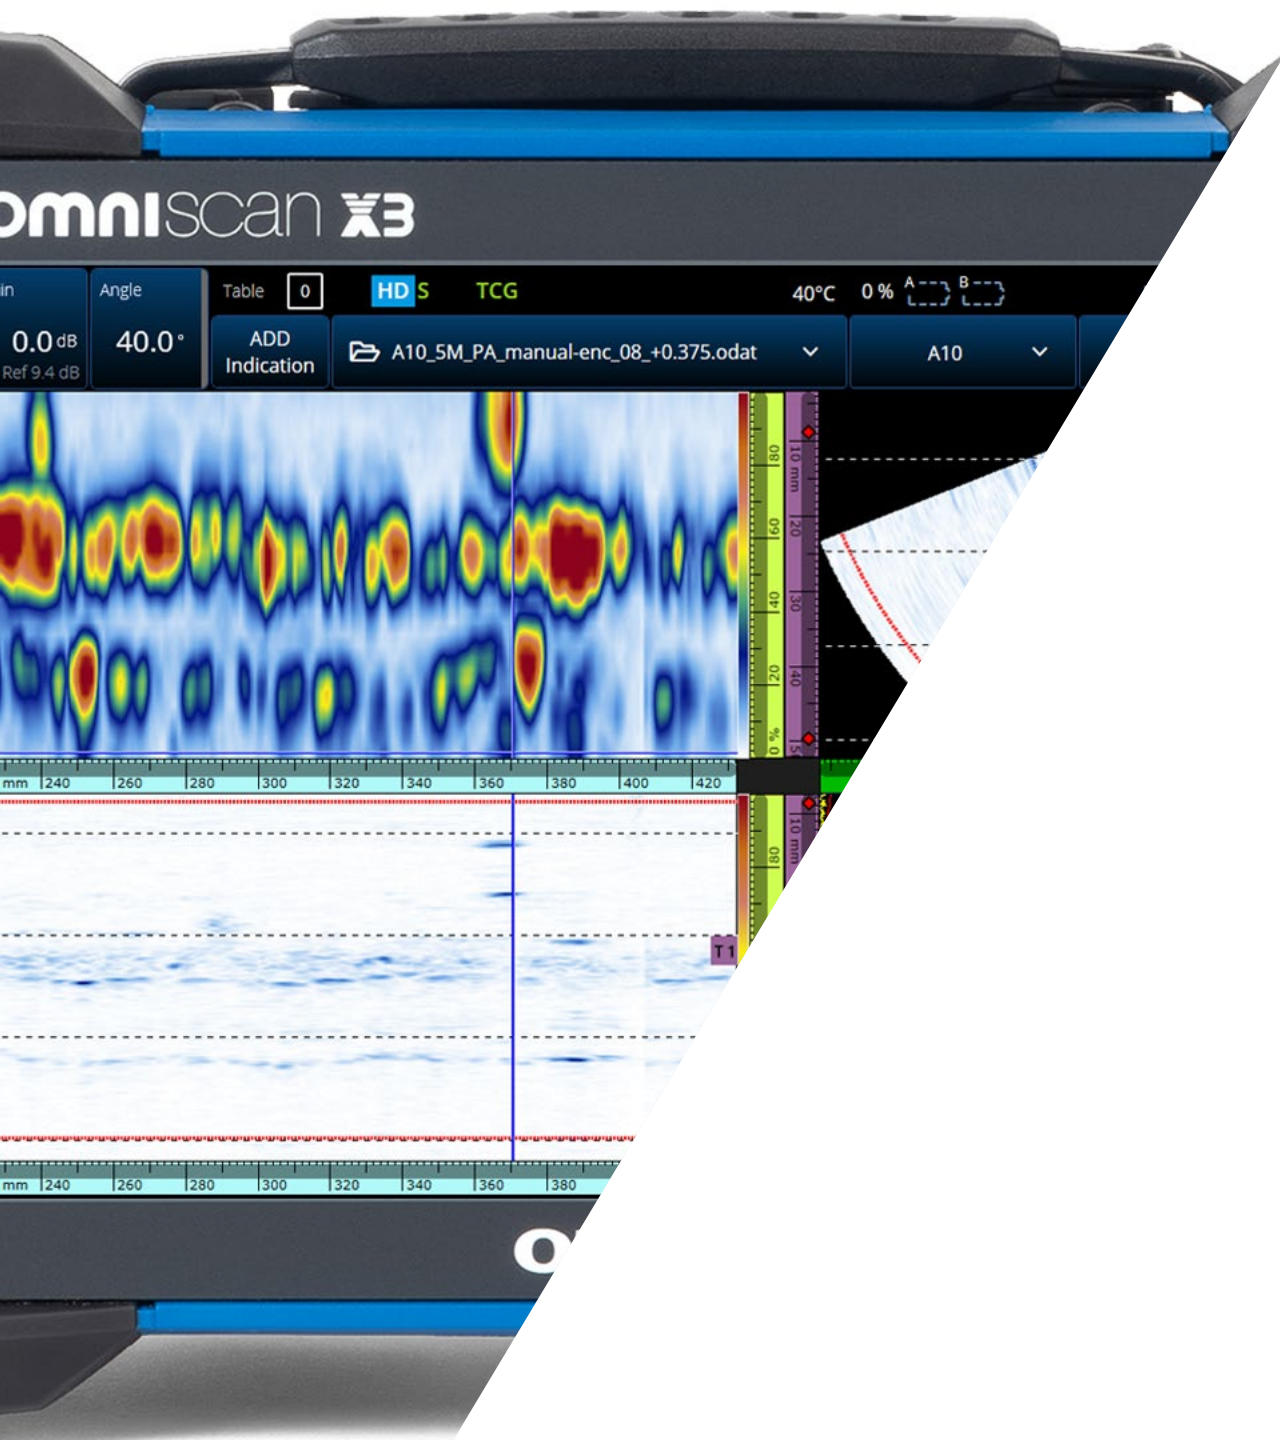

# 01

## Updating MXU via the Cloud and a Wireless Connection

# Updating MXU via the Cloud and a Wireless Connection


Follow these steps to connect your OmniScan X3 unit to a wireless network:

- 1 Insert the Wi-Fi® dongle and start up the OmniScan X3 unit.




# Updating MXU via the Cloud and a Wireless Connection

- 2 On your OmniScan instrument, in the OmniScan Launcher, select **Wireless** to open the Wireless Properties window.

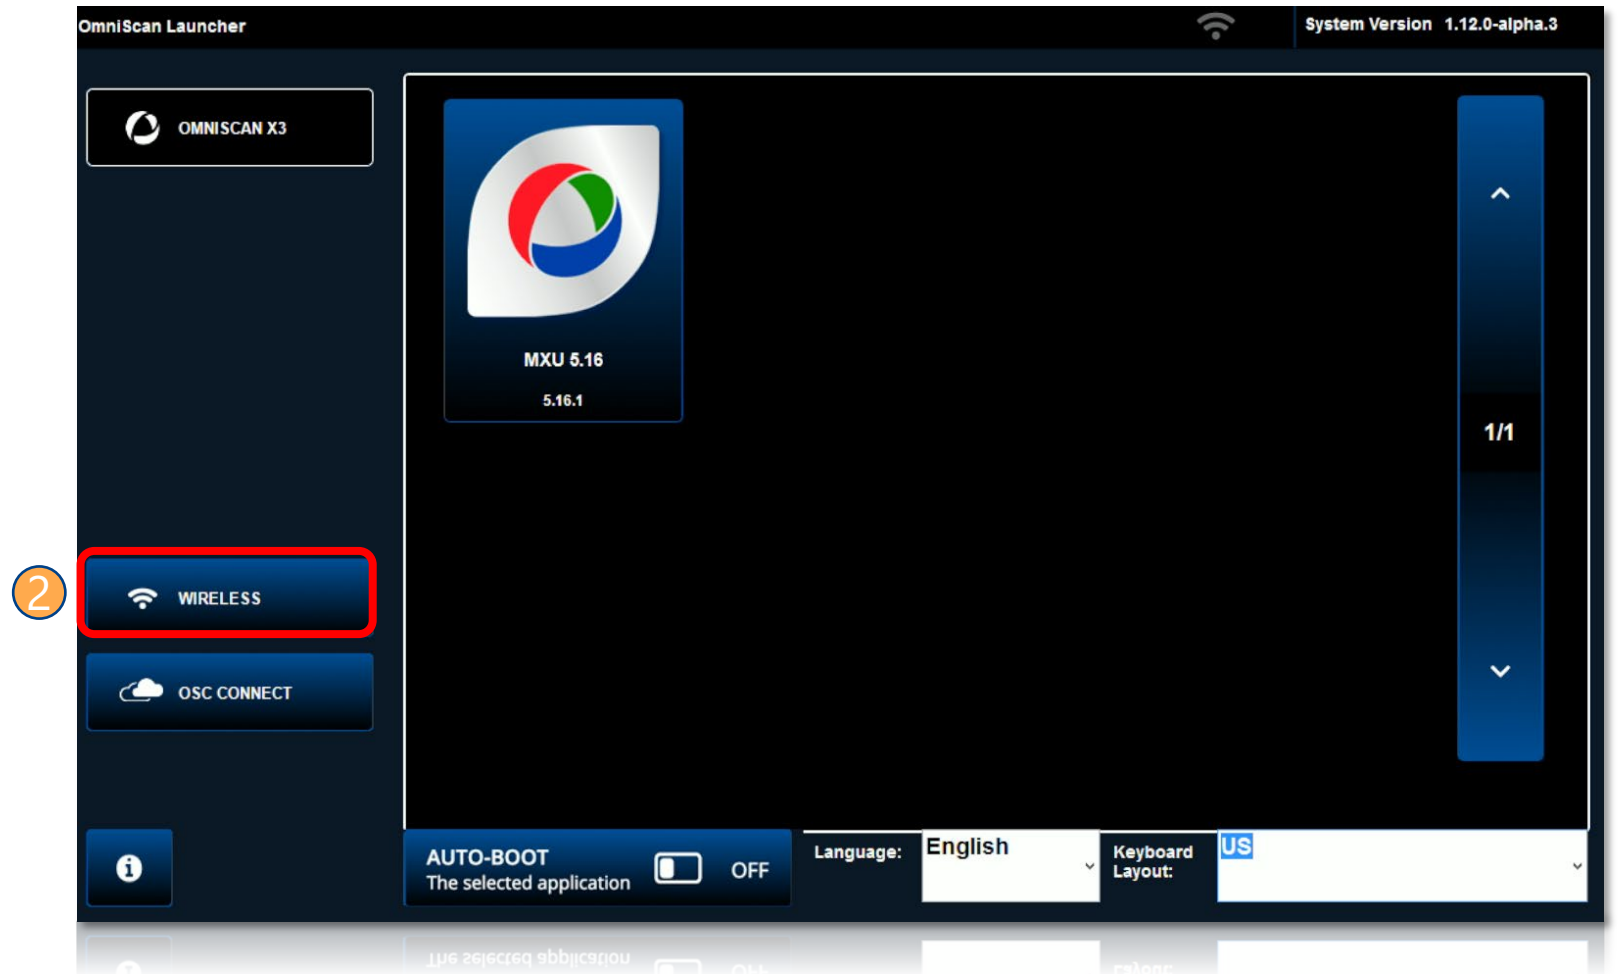


# Updating MXU via the Cloud and a Wireless Connection

- 3 Select the wireless network to which you want to connect the instrument.
- 4 Enter the connection information for the wireless network.
- 5 Tap **Connect**.

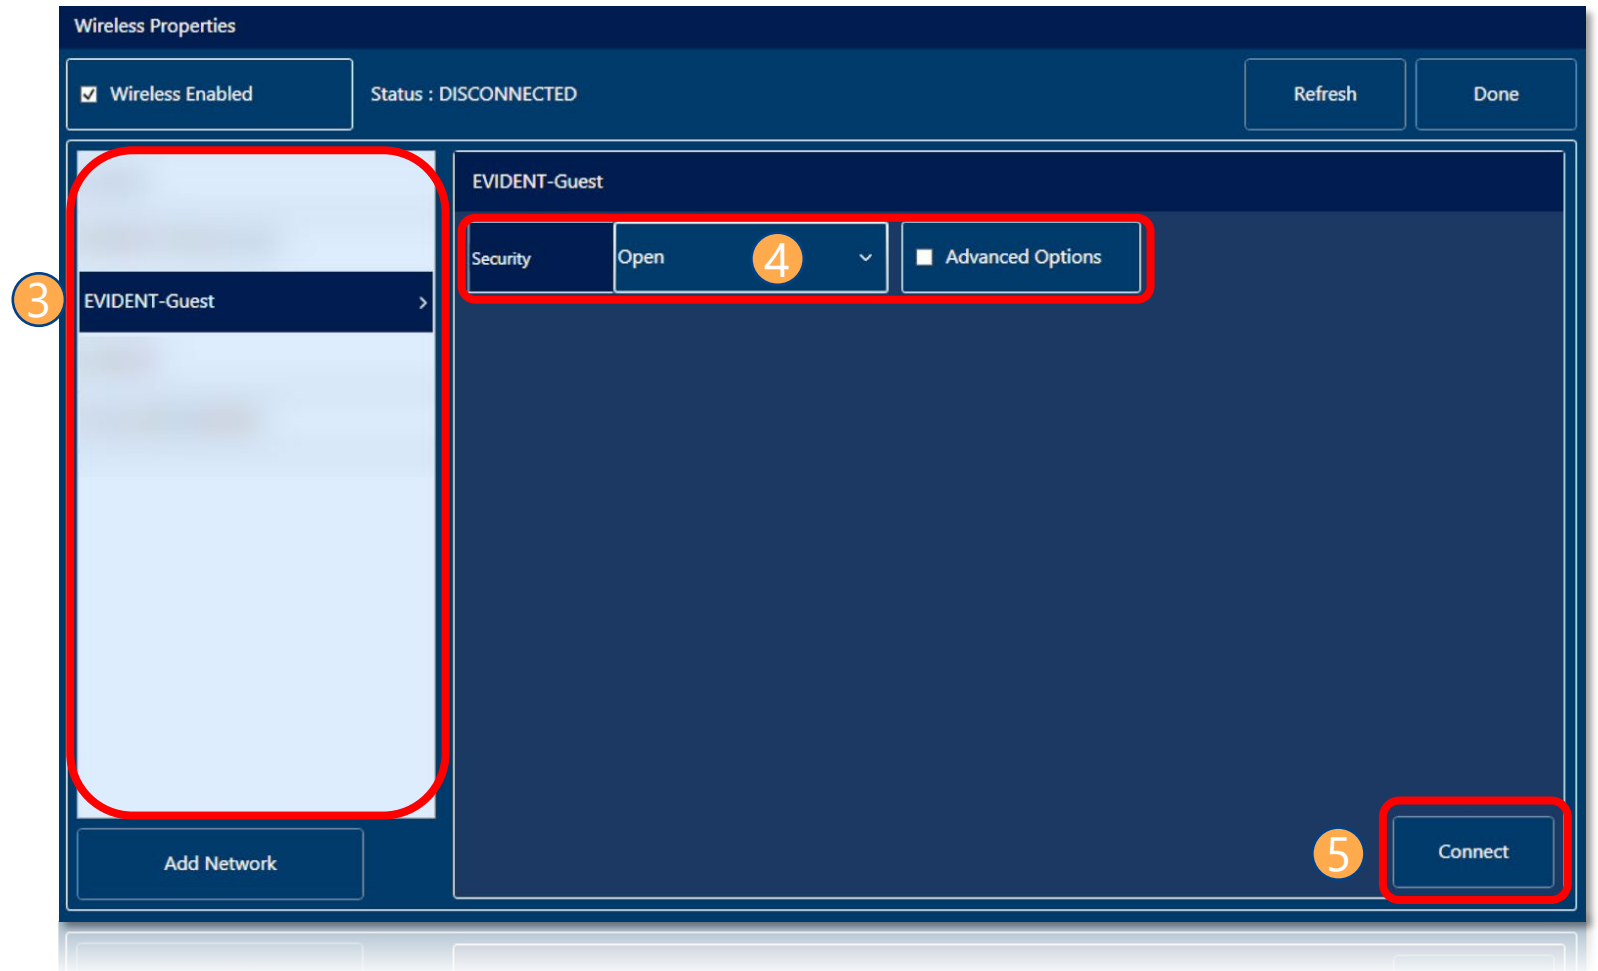

# Updating MXU via the Cloud and a Wireless Connection


- 6 Confirm that the **Status** has changed to CONNECTED.
- 7 Tap **Done** to exit the Wireless Properties window.
- \* NOTE: If needed, tap **Clear** to disconnect and forget these wireless parameters

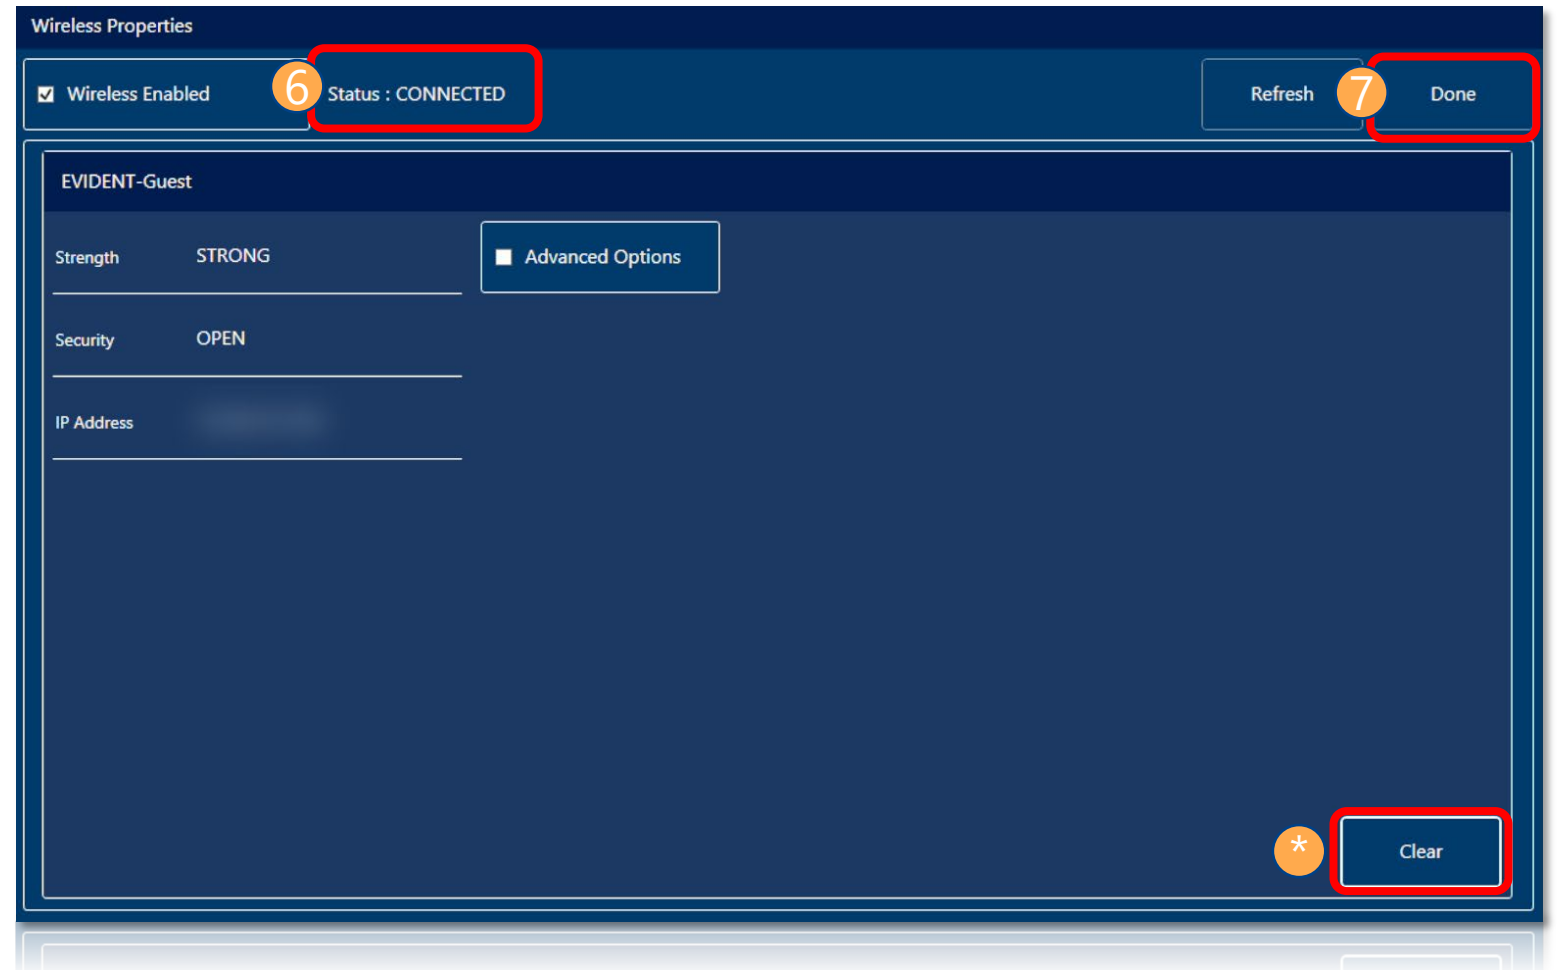

# Updating MXU via the Cloud and a Wireless Connection

Follow these steps to ensure connection to the OSC cloud and to update your MXU software:


- 1 Select **OSC CONNECT** to open the Cloud Settings window.

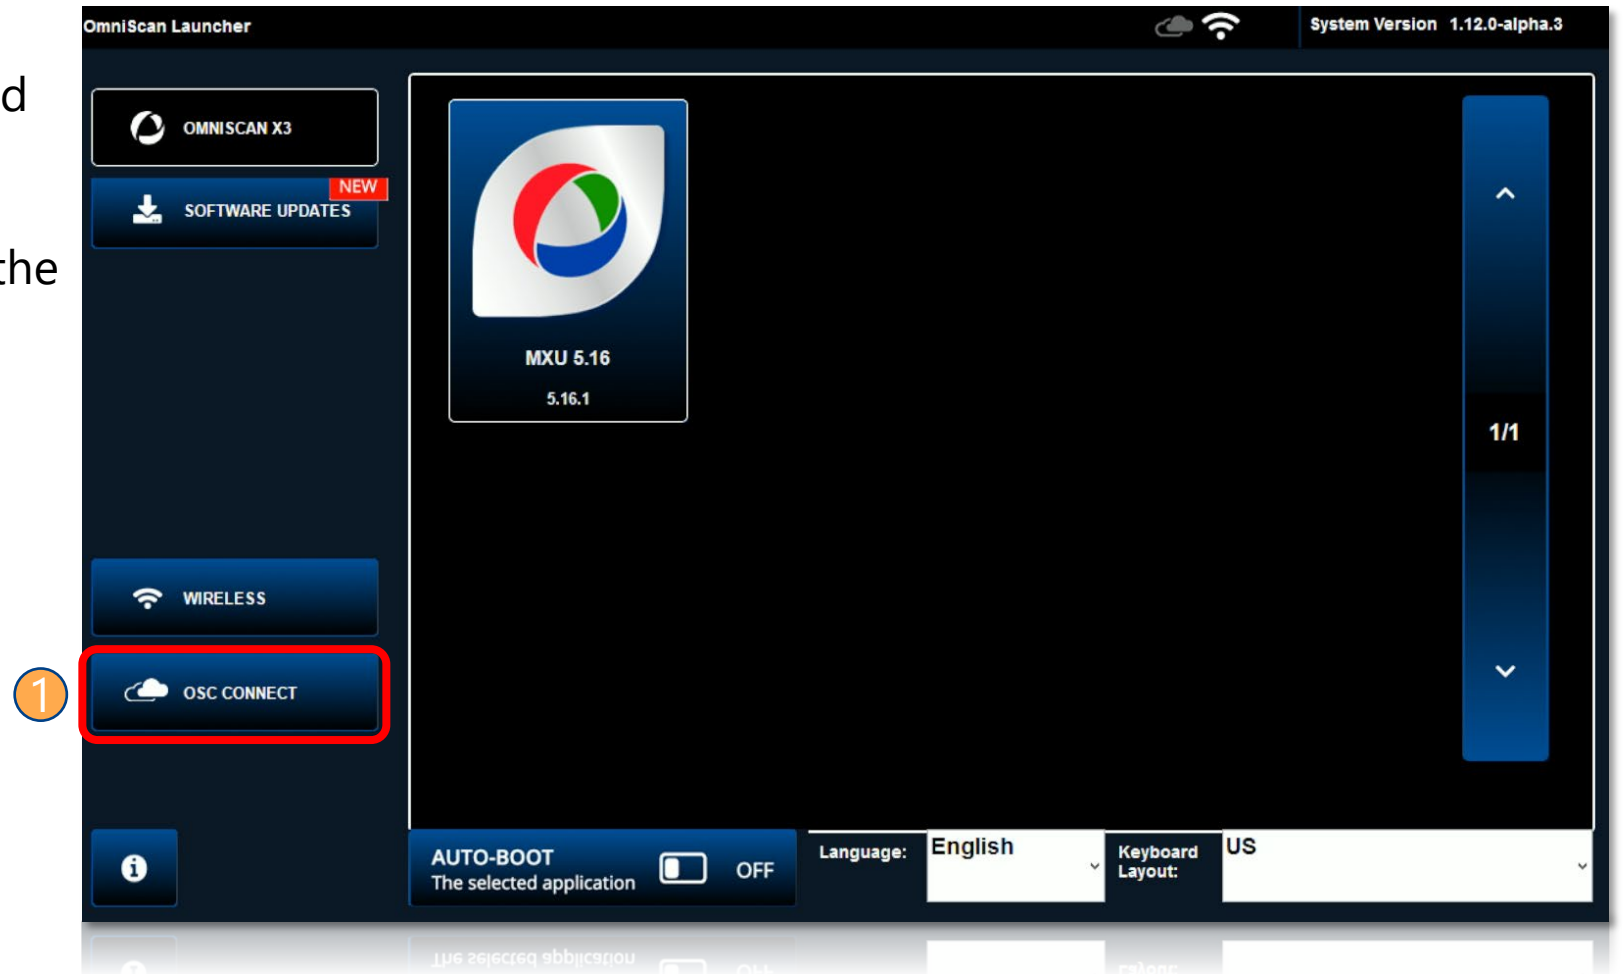




# Updating MXU via the Cloud and a Wireless Connection


- 2 If it is unchecked, check the **Enable** box.
- 3 Select **Done** to return to the OmniScan Launcher.
- \* NOTE: If under **OSC Connection Status**, there is a red **No** next to **Ready**, refer to the *OmniScan MXU Software User's Manual* (pages 219–220) or contact your local service center.

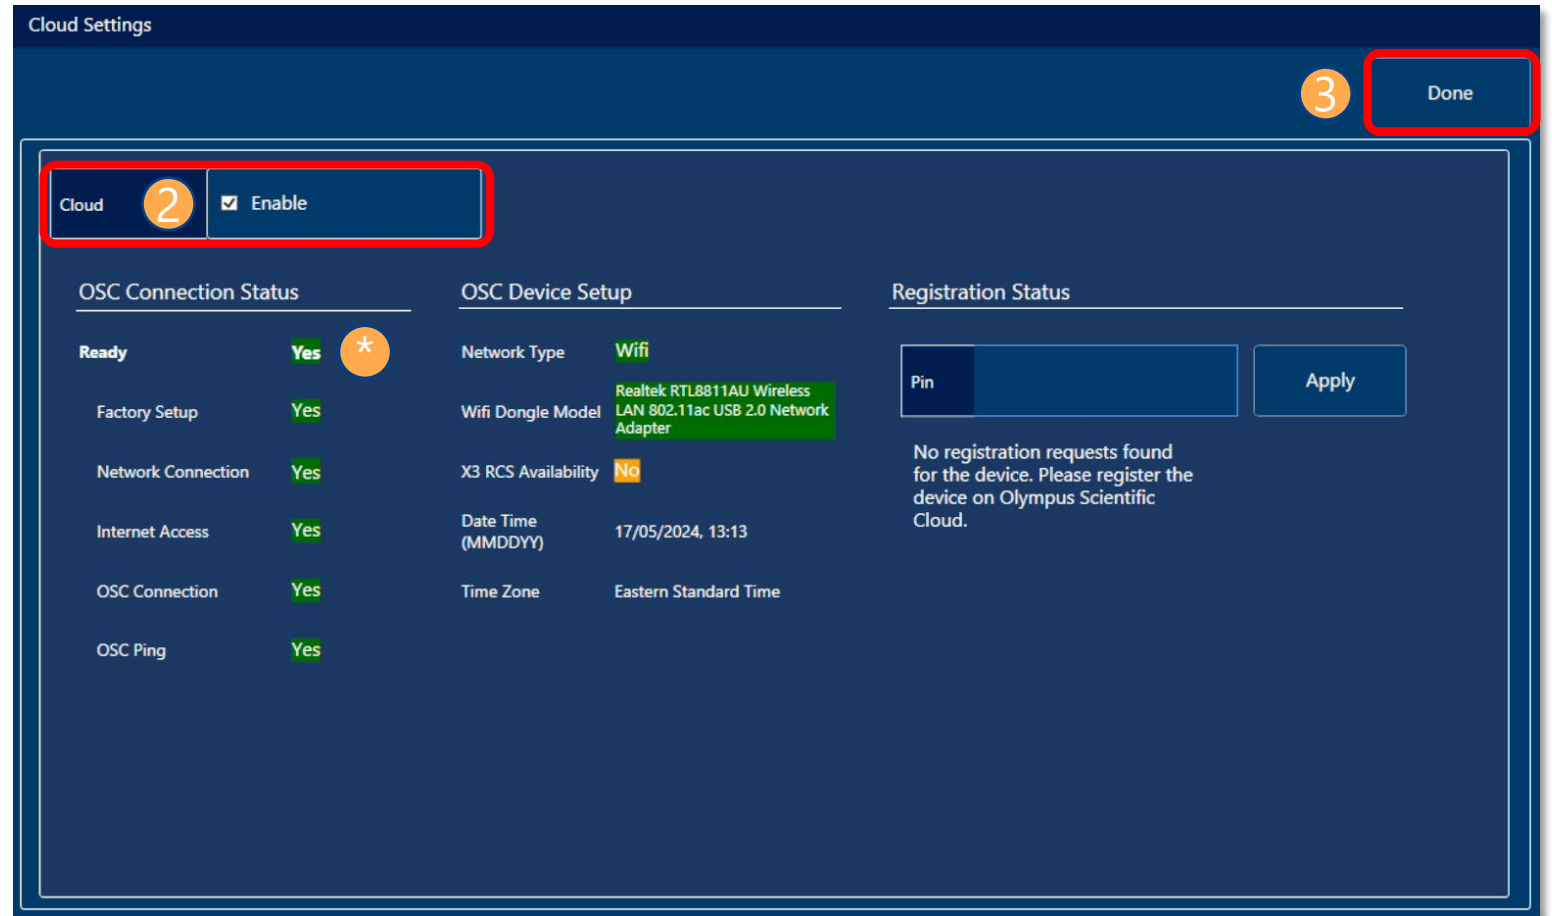

# Updating MXU via the Cloud and a Wireless Connection

- 4 Select **Software Updates**. The available updates will appear in the OmniScan Launcher.
- 5 Select the app icon of the MXU version you want to install.
- 6 Select **YES** to install the update on the instrument.

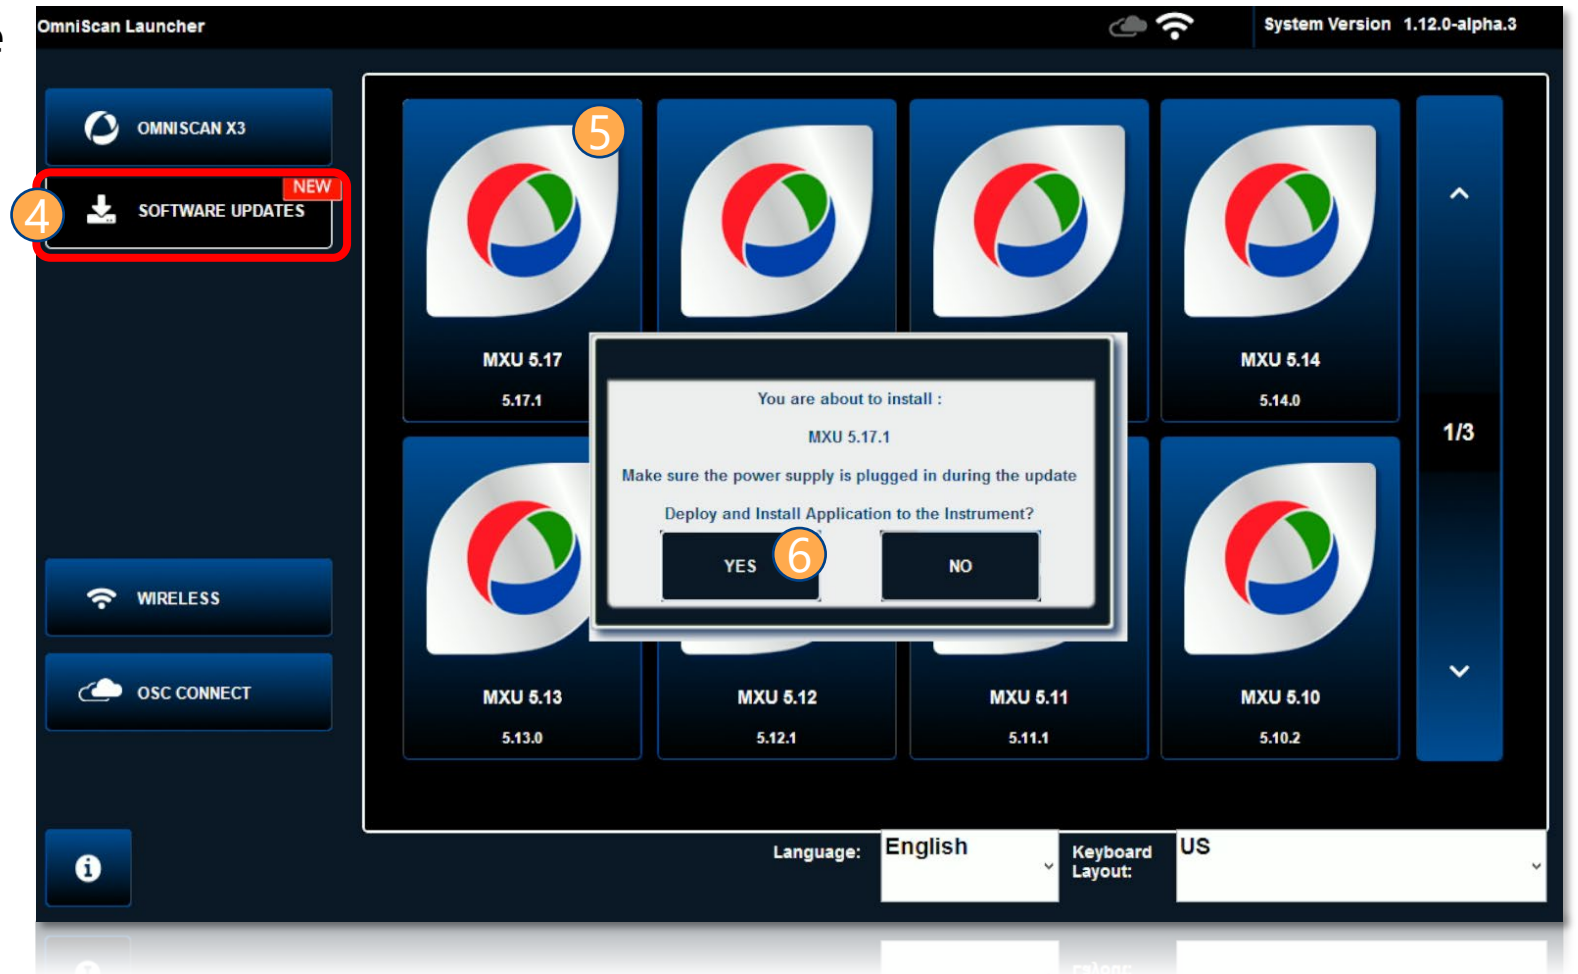

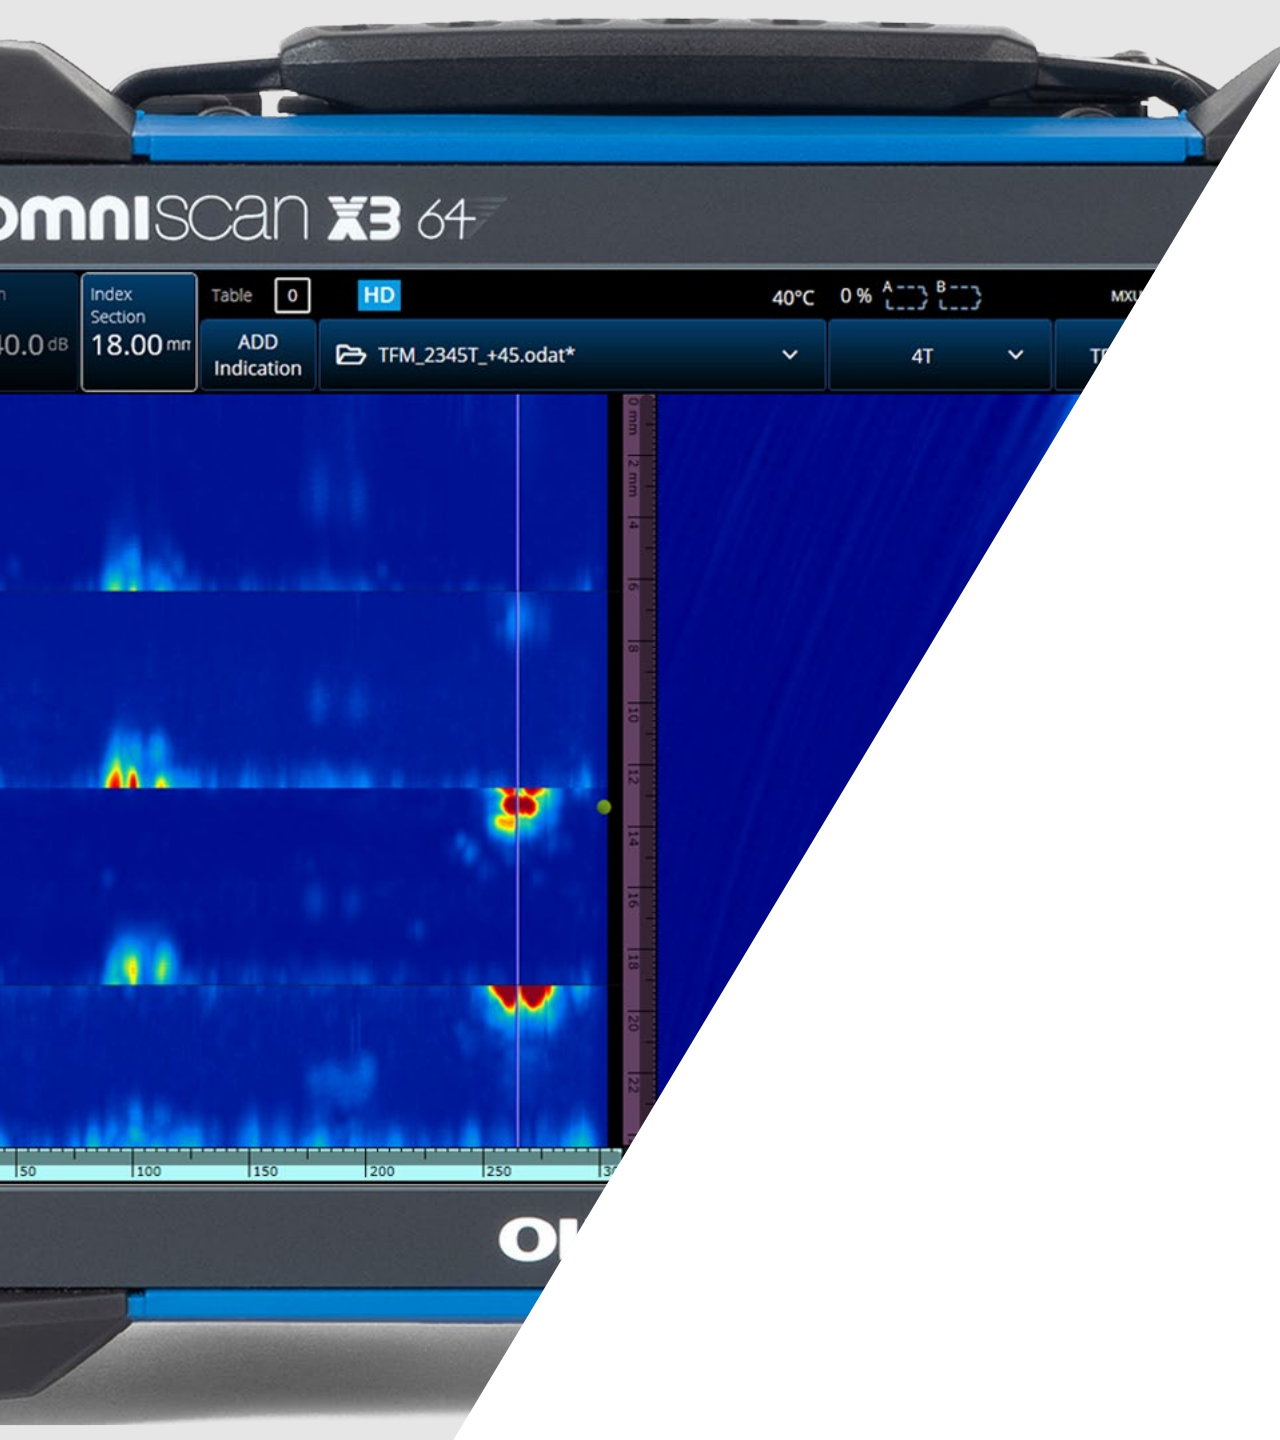

# 02

---


**Updating MXU via the Evident Website and a Flash Drive or SD Card**

# Updating MXU via the Evident Website and a Flash Drive or SD Card

Download the latest software installer:

- 1 On your PC or laptop, go to:  
<http://www.olympus-ims.com/en/service-and-support/downloads/>

- 2 Select **OmniScan**, then **OmniScan X3**.

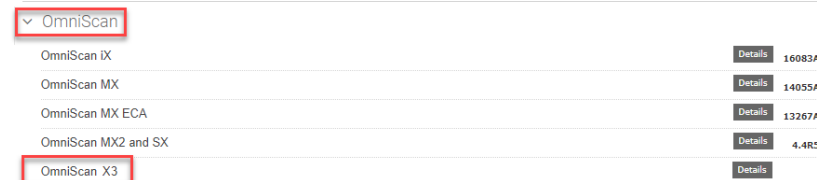

- 3 Click **Download** to download the file onto your PC or laptop.


Language	File Size	Version	Download
English		[History]	Download

- 4 Insert a USB flash drive or SD card in the PC or lap top, and copy the downloaded \*.wrp file (MXU\_5.X.X\_Package~5.X.X.wrp) to the storage device.
- 5 Insert the USB flash drive or SD card in the designated connector on the side of the OmniScan X3 unit.



# Updating MXU via the Evident Website and a Flash Drive or SD Card

- 6 In the OmniScan Launcher, select **Removable Drive**.
- 7 Select the app icon of the MXU version you want to install.
- 8 Select **YES** to install the update on the instrument.

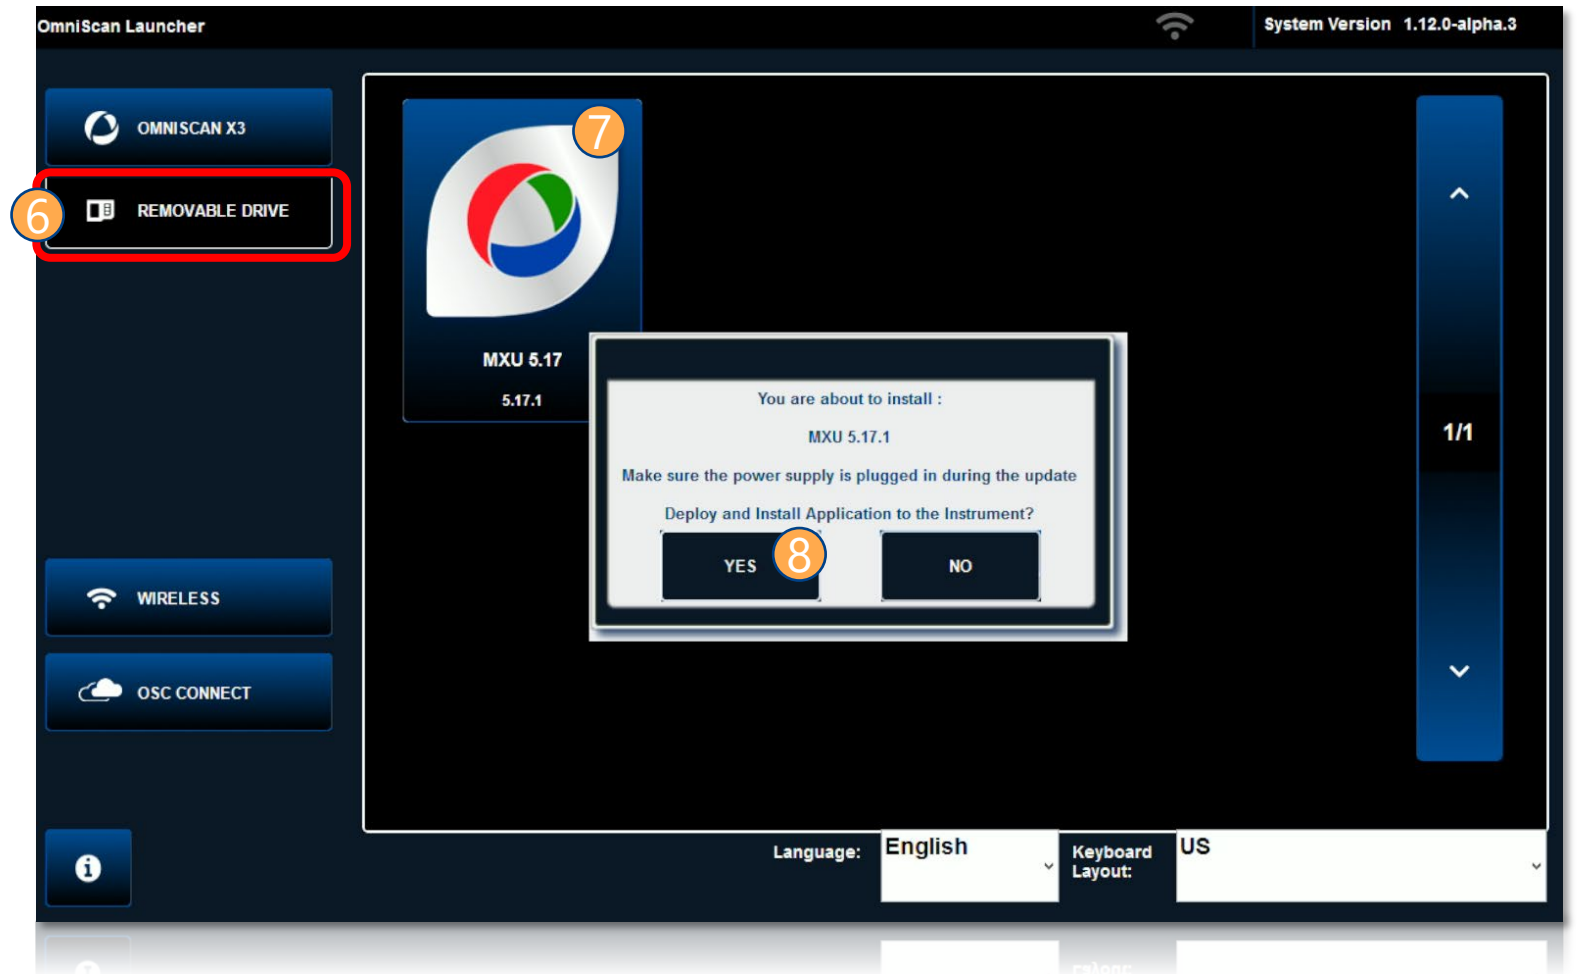

**E**  **IDENT**

**SEEING IS SOLVING**